



www.asukaresources.com

HDMI True Matrix

4X4 HDMI2.0b Matrix Audio Extract

AHDMX-V2044A



PRODUCT DESCRIPTION

This high performance HDMI Matrix Switcher can switch any of these four HDMI 2.0 sources to four HDMI 2.0 displays. Each input and output supports up to 4K60 4:4:4 resolution and HDCP 2.2. The outputs can be individually scaled for 1080p. De-embedded audio as analog L/R and coaxial is available for both outputs. The ARC function can return display device audio to coaxial port output only. Advanced EDID management is supported. With its 18Gbps bandwidth and the additional features with latest HDMI standards. This switcher can be controlled from the front panel, RS-232, IR remote, or TCP/IP.

PRODUCT KEY FEATURES


- HDMI 2.0, HDCP 2.2 / HDCP 1.4 and DVI 1.0 compliant
- Four 18G HDMI 2.0 video inputs support up to 4K60 444 resolution
- Four 18G HDMI 2.0 video outputs support up to 4K60 444 resolution
- Four outputs can be individually scaled for 4K→1080p
- De-embedded audio to analog L/R and Coaxial ports output
- ARC audio return to the coaxial ports output only
- Built-in Web GUI for TCP/IP control
- Advanced EDID management supported
- Four methods of control: Front panel, RS-232, IR remote and TCP/IP
- Compact design for easy and flexible installation

SPECIFICATIONS:

Technical			
HDMI Compliance	HDMI 2.0		
HDCP Compliance	HDCP 2.2 and HDCP 1.4		
Video Bandwidth	18 Gbps		
Video Resolution	4K2K 50/60Hz 4:4:4 4K2K 50/60Hz 4:2:0 4K2K 30Hz 4:4:4 1080p, 1080i, 720p, 720i, 480p, 480i All HDMI 3D TV formats All PC resolutions including 1920 x 1200		
Output Scaling	4K to 1080p		
3D Support	Yes		
Color Space	RGB, YCbCr4:4:4, YCbCr4:2:2, YCbCr 4:2:0		
Color Depth	8-bit, 10-bit, 12-bit [1080P, 4K30Hz, 4K60Hz (YCbCr 4:2:0)] 8-bit [4K60Hz (YCbCr 4:4:4)]		
HDMI Audio Formats	PCM2.0/5.1/7.1CH, Dolby Digital/Plus/EX, Dolby True HD, DTS, DTS-EX, DTS-96/24, DTS High Res, DTS-HD Master Audio, DSD		
Coaxial Audio Formats	PCM2.0, Dolby Digital / Plus, DTS 2.0/5.1		
L/R Audio Formats	PCM2.0CH		
HDR Support	HDR10, HDR10+. Dolby Vision, HLG		
ESD Protection	Human-body Model: ±8kV (Air-gap discharge), ±4kV (Contact discharge)		
Connections			
Input Ports	4×HDMI Type A [19-pin female]		
Output Ports	4×HDMI Type A [19-pin female] 4×L/R audio out [3.5mm Stereo Mini-jack] 4×COAX audio out [RCA]		
Control ports	1x TCP/IP [RJ45] 1x RS-232 [3-pin phoenix connector] 1x IR EXT [3.5mm Stereo Mini-jack]		
Mechanical			
Housing	Metal Enclosure		
Color	Black		
Dimensions	220mm (W)×105mm (D)×44mm (H)		
Weight	792g		
Power Supply	Input: AC100~240V 50/60Hz Output: DC12V/2.5A (Locking connector)		
Power Consumption	10W (max), 1.56W (Standby)		
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F		
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F		
Relative Humidity	20~90% RH (non-condensing)		
Resolution / Cable Length	4K60 - Feet / Meters	4K30 - Feet / Meters	1080P60 - Feet / Meters
HDMI IN / OUT	10ft / 3M	30ft / 10M	42ft / 15M
The use of "Premium High Speed HDMI" cable is highly recommended.			


Operation Controls and Functions

Front Panel:

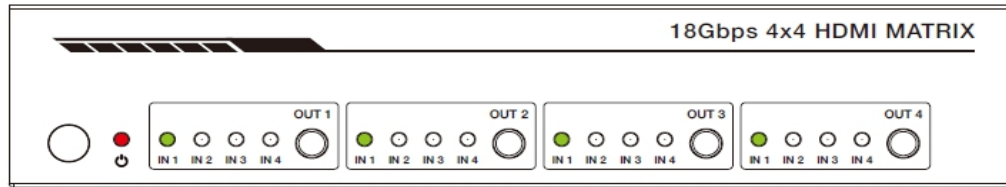


Name	Function description
IR Sensor	IR input for remote control of the switcher.
POWER LED	Red LED indicates that the unit is powered.
OUT 1 / OUT 2 / OUT 3 / OUT 4 Button	Press to select the desired input.
IN 1 IN2 / IN3 / IN4 LED	Green LED indicates when the input is selected for respective output.

Rear Panel:

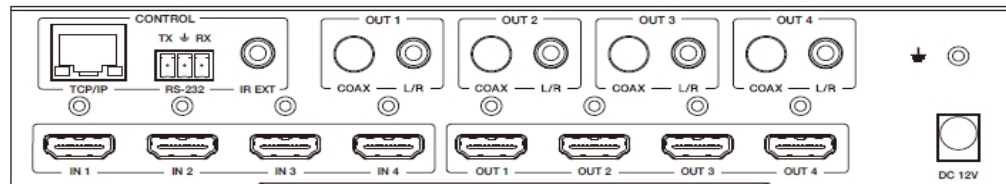


Name	Function description
TCP/IP (RJ45)	Control port for TCP/IP control or accessing the built-in Web GUI.
RS-232	3-pin pluggable connector for RS-232 control of the Switcher.
IR EXT	IR eye input for IR control of the Switcher.
Coaxial Audio OUT 1 / OUT 2 / OUT 3 / OUT 4	RCA connector for coaxial audio output from HDMI OUT 1 / OUT 2 / OUT 3 / OUT 4.
L/R Audio OUT 1 / OUT 2 / OUT 3 / OUT 4	3.5mm Mini-jack connector for stereo audio output from HDMI OUT 1 / OUT 2 / OUT 3 / OUT 4.
Earthing Point	Screw terminal for earthing the Switcher.
HDMI Input 1 to 4	HDMI Source inputs 1 to 4.
HDMI Output 1 to 4	HDMI outputs for displays 1 to 4.
DC 12V IN	DC 12V input for 12V 2.5APSU.

Application Example

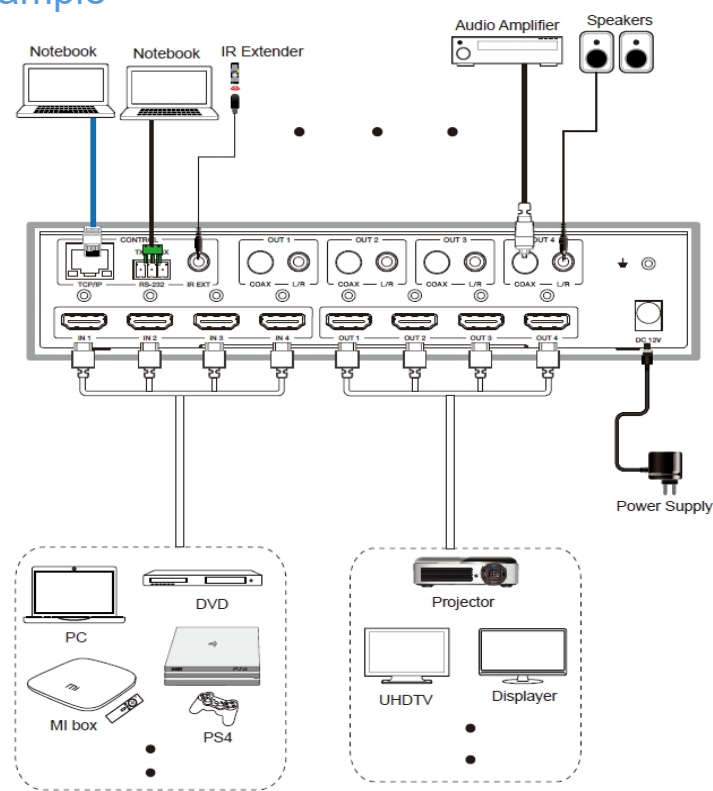

IR Remote:

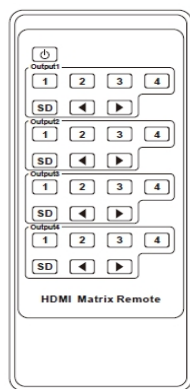

	Power on the Switcher or set it to standby mode.
Output 1 (Output 2 / 3 / 4)	
1/2/3/4	Select the desired input source to Output 1 port output, the corresponding green LED on the front panel illuminates.
SD	Switch downscale or bypass mode to the Output 1 port output. Select the last or next the desired input source to Output 1 port, the corresponding green LED on the front panel illuminates.

Using the Built-In Web GUI Interface

The Switcher has a built-in Web interface to provide a means of controlling or configuring various settings. There are six pages available, each of which will be outlined in detail in the following sections:

The six pages are:

- 1.**Status** – Display information about the firmware and IP setting.
- 2.**Video** – Switch the desired input source to output and set the preset.
- 3.**Input** – Display information about the input signal and EDID setting.
- 4.**Output** – Display information about the output signal and scaler option.
- 5.**Network** – Allow basic network setting management and login options.
- 6.**System** – Panel lock, beep, serial baud rate setting and firmware update.


Note these six pages are only accessible in Admin mode,
when User mode is used only the Status and Video pages are available.

To access the Web interface, enter the IP address of the switcher into the address bar of any web browser.
The default IP address is **192.168.1.100**. Please see the following operation method.


Note that if the IP address of the switcher is not know, use the RS-232 command given in the Network Setting section “r ip addr!” to discover the current IP address or set the switcher to, factory default status and IP address restores to default **192.168.1.100**.

Step 1: The TCP/IP port on the rear panel is directly connected a PC with an UTP cable.


Step 2: Set your PC IP address to the same network segment with Switcher, for instance set PC IP address to 192.168.1.200 and Subnet mask to 255.255.255.0.

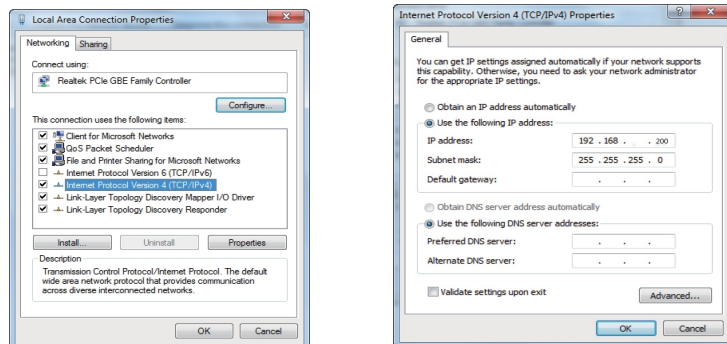

Step 3: Enter the Switcher's IP address into your browser on the PC to enter Web GUI page.



After entering the IP address the following log in screen will appear:

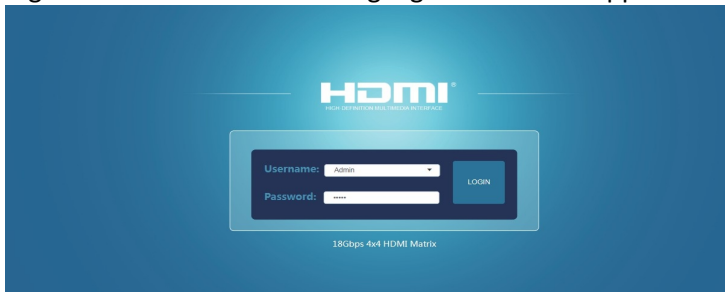


Select the Username from the list and enter the password. The default passwords are:

Username	User	Admin
Password	User	Admin

After entering the log in details, click the LOGIN button and the following Status page will appear.

Status page

The Status page provides basic information about the product Model name, the installed firmware version and the network setting. This page is visible in both User and Admin modes.

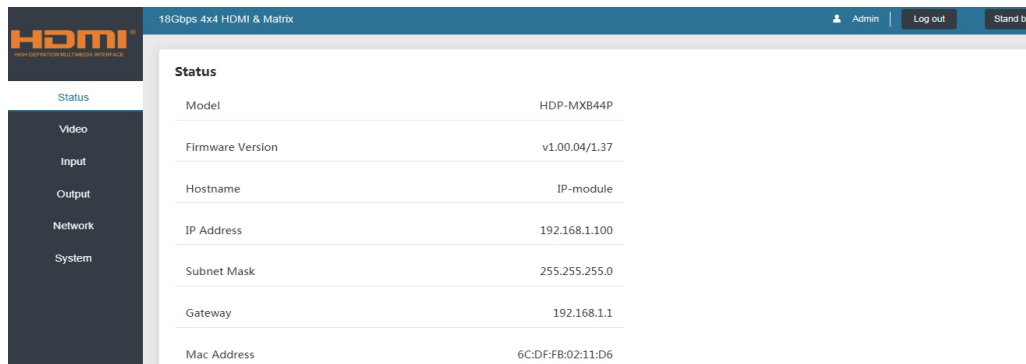

The buttons at the top right of the web interface are always available and provide the following function:

- 1.The Log out button will disconnect the current user from display the log in screen.
- 2.The Power on button changes the power status of the Switcher between On and Stand-by mode.

Video page

The Video page allows selection of the inputs source and set the presets.

The Video page interface includes a sidebar with navigation options: Status, Video, Input, Output, Network, and System. The main content area is titled '18Gbps 4x4 HDMI & Matrix' and features a 'Switch' table and a 'Presets' table.

Outputs	Video Source
Output 1	HDMI 1 INPUT
Output 2	HDMI 2 INPUT
Output 3	HDMI 3 INPUT
Output 4	HDMI 4 INPUT

Presets Name	Presets Set	Presets Save	Presets Clear
preset1	Set	Save	Clear
preset2	Set	Save	Clear
preset3	Set	Save	Clear
preset4	Set	Save	Clear

To this preset setting, first you need to select the desired input source to four output ports. Then click the Save button to save the setting. When you click the line Set button, this preset you have saved will be used. The Clear button will clear the preset. There are four presets setting available.

Input page

The Input page provides information about which inputs are connected and have a signal present.

The inputs can be giving more meaningful names, if desired.

The EDID column provides a list of EDID options for each individual input.

The Input page interface includes a sidebar with navigation options: Status, Video, Input, Output, Network, and System. The main content area is titled '18Gbps 4x4 HDMI & Matrix' and features an 'Input Setting' table and EDID management options.

Inputs	Active	Name	EDID
HDMI 1	●	Input1	4K2K60_444,Stereo Audio 2.0 HDR
HDMI 2	●	Input2	4K2K60_444,HD Audio 7.1 HDR
HDMI 3	●	Input3	4K2K60_444,Stereo Audio 2.0 HDR
HDMI 4	●	Input4	4K2K60_444,Stereo Audio 2.0 HDR

Load EDID to User Memory

Select EDID File: Browse... Select Destination: User1

Load EDID to Computer

Select EDID File: HDMI 1

The following EDID options are available in any of the EDID drop-down lists:

1080P, Stereo Audio 2.0	4K2K30Hz_444 Dolby/DTS 5.1
1080P, Dolby/DTS 5.1	4K2K30Hz_444 HD Audio 7.1
1080P, HD Audio 7.1	4K2K60Hz_420 Stereo Audio 2.0
1080I, Stereo Audio 2.0	4K2K60Hz_420 Dolby/DTS 5.1
1080I, Dolby/DTS 5.1	4K2K60Hz_420 HD Audio 7.1
1080I, HD Audio 7.1	4K2K60Hz_444 Stereo Audio 2.0
3D, Stereo Audio 2.0	4K2K60Hz_444 Dolby/DTS 5.1
3D, Dolby/DTS 5.1	4K2K60Hz_444 HD Audio 7.1
3D, HD Audio 7.1	4K2K60Hz_444 Stereo Audio 2.0 HDR
4K2K30Hz_444 Stereo Audio 2.0	4K2K60Hz_444 Dolby/DTS 5.1 HDR
	4K2K60Hz_444 HD Audio 7.1 HDR
	USER_1
	USER_2
	COPY_FROM_TX_1
	COPY_FROM_TX_2
	COPY_FROM_TX_3
	COPY_FROM_TX_4


This page also provides a means of sending a binary EDID file to either **User 1** or **User 2** EDID memories:

1. Select the binary EDID file on your PC by click on the **Browse** button.
2. Select either **User 1** or **User 2** from the drop-down list.
3. Click the **Upload** button.

The EDID data from any input or from the **User 1** and **User 2** locations can be read and stored on your PC.

■ Output page

The outputs can also be assigned meaningful names, if desired. The Output page provides information about the signal status of the outputs.

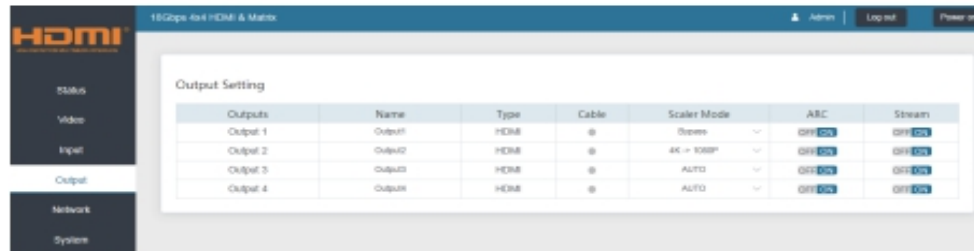

Outputs	Name	Type	Cable	Scaler Mode	ARC	Stream
Output 1	Output1	HDMI	D	Bypass	OFF	OFF
Output 2	Output2	HDMI	D	4K -> 1080P	OFF	OFF
Output 3	Output3	HDMI	D	AUTO	OFF	OFF
Output 4	Output4	HDMI	D	AUTO	OFF	OFF

The Scaler mode menu provides the following options:

Bypass	Follow the input source. (Pass-through)
4K→1080P	Downscale to 1080p, if needed.
AUTO	<u>Scaler</u> to match the display requirements.

The **ARC** buttons enable or disable the display device audio to the coaxial audio outputs. If the ARC function enables, the L/R audio port will have no voice output simultaneously.

The **Stream** buttons enable or disable the output signal for the respective output.

■ Network page

The Network page allows the configuration of the network settings.

*Note that the IP address boxes are only accessible when the **Mode** button is set to **Static**.*

The log in passwords can be changed on this page.

Note that any changes to this page will require the new details into the web browser and/or the log in screen.

The screenshot shows the 'Network' page of the HDMI 100Mbps 4x4 HDMI & Matrix web interface. The left sidebar contains navigation links: Status, Video, Input, Output, Network (highlighted), and System. The main content area is titled '100Mbps 4x4 HDMI & Matrix' and includes a user profile 'Admin' with 'Log out' and 'Power on' buttons. The 'IP Settings' section has a 'Mode' dropdown set to 'Static' (with 'DHCP' as an option). Below this are input fields for 'IP Address' (192.168.1.100), 'Gateway' (192.168.1.1), 'Subnet Mask' (255.255.255.0), and 'Select Port' (23). The 'Web Login Settings' section includes a 'Username' dropdown set to 'User' (with 'Admin' as an option), and input fields for 'Old Password', 'New Password', 'Confirm', and 'Password'. A 'Product Model' field is set to 'HCP-40044P'. At the bottom, there are buttons for 'Set Network Defaults' and 'Save'.

■ System page

The system page allows setting of the panel lock and beep on/off, control RS-232 port baud rate.

This page is also used to install new firmware update, restore the factory default settings and reboot the Switcher.

The screenshot shows the 'System' page of the HDMI 100Mbps 4x4 HDMI & Matrix web interface. The left sidebar contains navigation links: Status, Video, Input, Output, Network, and System (highlighted). The main content area is titled 'System' and includes a 'Panel Lock' section with a dropdown set to 'ON' (with 'OFF' as an option). Below this is a 'Beep' section with a dropdown set to 'ON' (with 'OFF' as an option). The 'Serial Baud Rate' section has a dropdown set to '115200' (with other options: 4800, 9600, 19200, 38400, 57600). The 'Firmware Update' section has a 'Browse' button and an 'Upload' button. The 'Factory Reset' section has a 'Reset' button. The 'Reboot' section has a 'Reboot' button.

8. API control command

The Switcher can also be controlled by RS-232. Connect a PC by using a serial cable and open any of a Serial Command tool on the PC such as **Comm Operator**, **Docklight** or **hercules**, etc to send command for controlling the Switcher. Please see the following connection diagram.

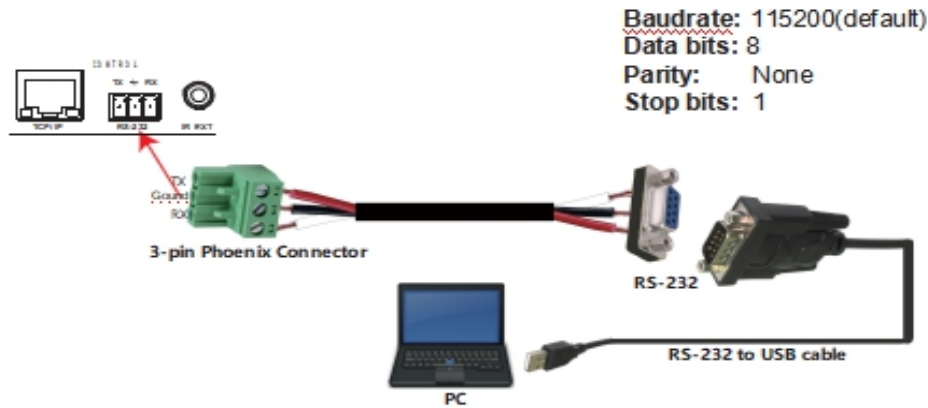


Figure 1: 3-pin phoenix connector to USB

Important:

1. All messages sent to the Switcher must be terminated with an exclamation mark (!). Any carriage return that is present after the end of the command will be ignored.
2. All spaces shown in the commands are required.
3. All response messages are terminated by a CR/LF sequence.
4. When all four inputs are requested by the same command, the response will report each input on a separate line.
5. When four outputs are requested by the same command, the response will report each output on a separate line.

The ASCII list about the product is shown as below.

ASCII Command		
Serial port protocol: Baud rate: 115200 (default), Data bits: 8bit, Stop bits: 1, Check bit: None TCP/IP protocol port: 8000 The x, y, z and XXX are parameters.		
RS-232Command	Function description	Feedback
Power		
s power z!	power on/off the device, z=0~1 (z=0 power off, z=1 power on)	power on System Initializing... Initialization Finished! power off
r power!	get current power state	power on / power off
s reboot!	reboot the device	Reboot... System Initializing... Initialization Finished!
SYSTEM Setup		
help!	Lists all commands	
r type!	Get device model	HDP-MXB44P
r status!	Get device current status	Get the unit all status: power, beep, lock, in/out connection, video/audio crosspoint, edid, scaler, hdcp, network status
r fw version!	Get Firmware version	MCU FW version x.xx.xx
r link in x!	Get the connection status of the x input port, x=0~4 (0=all)	HDMI IN1: connect
r link out y!	Get the connection status of the y output port, y=0~4 (0=all)	HDMI OUT1: connect
s reset!	Reset to factory defaults	Reset to factory defaults System Initializing... Initialization Finished!
s beep z!	Enable/Disable buzzer function, z=0~1 (z=0 beep off, z=1 beep on)	beep on / beep off
r beep!	Get buzzer state	beep on / beep off
s lock z!	Lock/Unlock front panel button, z=0~1 (z=0 lock off, z=1 lock on)	panel button lock on panel button lock off
r lock!	Get panel button lock state	panel button lock on/off
s save preset z!	Save switch state between all output port and the input port to preset z, z=1~8	save to preset 1
s recall preset z!	Call saved preset z scenarios, z=1~8	recall from preset 1

s clear preset z!	Clear stored preset z scenarios, z=1~8	clear preset 1
r preset z!	Get preset z information, z=1~8	video/audio crosspoint
s baud rate xxx!	Set the serial port baud rate of RS02 module, z=(115200,57600,38400,19200,9600,4800)	Baudrate: 115200
r baud rate!	Get the serial port baud rate of RS02 module	Baudrate: 115200
s id z!	Set the control ID of the product, z=000~999	id 888
Output Setting		
s in x av out y!	Set input x to output y, x=1~4, y=0~4(0=all)	input 1 -> output 2
r av out y!	Get output y signal status y=0~4(0=all)	input 1 -> output 1 input 2 -> output 2 input 4 -> output 4
s out y stream z!	Set output y stream on/off, y=0~4(0=all) z=0~1 (0:disable, 1:enable)	Enable out 1 stream Disable out 1 stream
r out y stream!	Get output y stream status, y=0~4(0=all)	Enable out 1 stream
s hdmi y scaler z!	Set hdmi output y port output scaler mode, y=0~4 (0=all), z=1~3(1=bypass, 2=4k->1080p, 3=Auto)	hdmi 1 set to bypass mode
r hdmi y scaler!	Get hdmi output y port output mode y=0~4(0=all)	hdmi 1 set to bypass mode
s hdmi y hdp z!	Set hdmi output y port hdp status y=0~4(0=all) z=0~1(1=active, 0=off)	hdmi 1 hdp active
r hdmi y hdp!	Get HDCP status of HDMI out y, y=0~4(0=all)	hdmi 1 hdp active
Audio Setting		
s hdmi y arc z!	Turn on/off arc of HDMI output y, y=0~4(0=all) z=0~1(z=0, off, z=1 on)	hdmi output 1 arc on hdmi output 1 arc off
r hdmi y arc!	Get the arc state of HDMI output y, y=0~4(0=all)	hdmi out1 arc on
EDID Setting		
r edid in x!	Get EDID status of the input x, x=0~4(0=all inputs)	IN1 EDID: 4K2K60_444, Stereo Audio 2.0 IN2 EDID: 4K2K60_444, Stereo Audio 2.0 IN3 EDID: 4K2K60_444, Stereo Audio 2.0 IN4 EDID: 4K2K60_444, Stereo Audio 2.0
r edid data hdmi y!	Get the EDID data of the hdmi output y port, y=1~4	EDID : 00 FF FF FF FF FF FF 00

s edid in x from z!	Set input x EDID from default EDID z, x=0~4(0=all), z=1~23 1、 1080p, Stereo Audio 2.0 2、 1080p, Dolby/DTS 5.1 3、 1080p, HD Audio 7.1 4、 1080i, Stereo Audio 2.0 5、 1080i, Dolby/DTS 5.1 6、 1080i, HD Audio 7.1 7、 3D, Stereo Audio 2.0 8、 3D, Dolby/DTS 5.1 9、 3D, HD Audio 7.1 10、 4K2K30_444, Stereo Audio 2.0 11、 4K2K30_444, Dolby/DTS 5.1 12、 4K2K30_444, HD Audio 7.1 13、 4K2K60_420, Stereo Audio 2.0 14、 4K2K60_420, Dolby/DTS 5.1 15、 4K2K60_420, HD Audio 7.1 16、 4K2K60_444, Stereo Audio 2.0 17、 4K2K60_444, Dolby/DTS 5.1 18、 4K2K60_444, HD Audio 7.1 19、 4K2K60_444, Stereo Audio 2.0 HDR 20、 4K2K60_444, Dolby/DTS 5.1 HDR 21、 4K2K60_444, HD Audio 7.1 HDR 22、 USER1 23、 USER2 24、 Copy_From_Hdmi_Tx_1 25、 Copy_From_Hdmi_Tx_2 26、 Copy_From_Hdmi_Tx_3 27、 Copy_From_Hdmi_Tx_4	IN1 EDID:1080p, Stereo Audio 2.0
Network setting		
r ipconfig!	Get the Current IP Configuration	IP Mode: Static, IP: 192.168.1.72 Subnet Mask: 255.255.255.0, Gateway: 192.168.1.1 Mac address: 00:1C:91:03:80:01 TCP/IP port=8000, telnet port=10
r mac addr!	Get network MAC address	Mac address: 00:1C:91:03:80:01
s ip mode z!	Set network IP mode to static IP or DHCP, z=0~1 (z=0 Static, z=1 DHCP)	Set IP mode: Static. Please use "s net reboot!" command or repower device to apply new config!
r ip mode!	Get network IP mode	IP mode: Static
s ip addr xxx.xxx.xxx.xxx!	Set network IP address	Set IP address: 192.168.1.100 Please use "s net reboot!" command or repower device to apply new config! DHCP on, Device can't config static address, set DHCP off first.

r ip addr!	Get network IP address	IP address:192.168.1.100
s subnet xxx.xxx.xxx.xxx!	Set network subnet mask	Set subnet Mask:255.255.255.0 Please use "s net reboot!" command or recover device to apply new config! DHCP on, Device can't config subnet mask, set DHCP off first.
r subnet!	Get network subnet mask	Subnet Mask:255.255.255.0
s gateway xxx.xxx.xxx.xxx!	Set network gateway	Set gateway:192.168.1.1 Please use "s net reboot!" command or recover device to apply new config! DHCP on, Device can't config gateway, set DHCP off first.
r gateway!	Get network gateway	Gateway:192.168.1.1
s tcp/ip port x!	Set network TCP/IP port (x=1~65535)	Set tcp/ip port:8000
r tcp/ip port!	Get network TCP/IP port	tcp/ip port:8000
s telnet port x!	Set network telnet port(x=1~65535)	Set telnet port:23
r telnet port!	Get network telnet port	telnet port:23
s net reboot!	Reboot network modules	Network reboot... IP Mode: Static IP: 192.168.1.72 Subnet Mask: 255.255.255.0 Gateway: 192.168.1.1 Mac address: 00:1C:91:03:80:01 TCP/IP port=8000 telnet port=10

Note that you can send 'RS232 command' to control the Switcher via Serial Command tool. The 'Function description' explains function about the command. The "Feedback" displays whether the command sends success or not and feedback the information you need to.